



SETTING THE SIREN

Your Guardzilla can be armed to trigger its ear-piercing 100 decibel alarm when motion is detected. To enable the siren to blare when motion is detected follow these instructions:

- 1 Press the **cog** icon below the monitor screen.

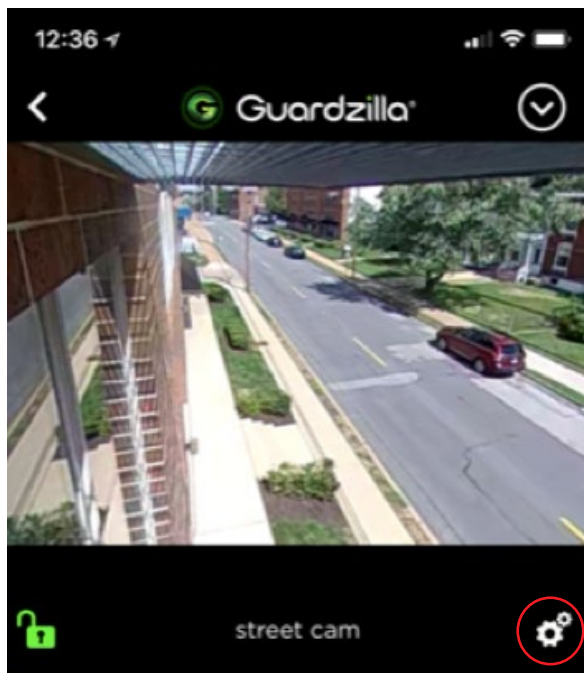

- 2 To activate the siren press **On**, then select how long you would like the siren to sound when triggered (5, 15, 30, 60 or 120 seconds).

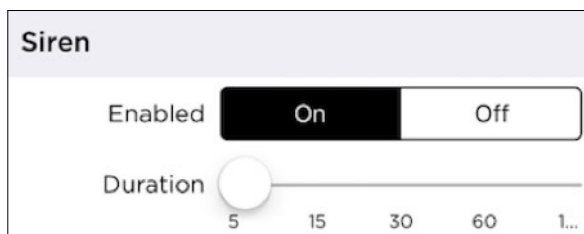

- 3 When the siren has been activated it can also be manually triggered by pressing the Siren icon on the main monitor screen. To trigger the siren touch the screen until the row of icons appears. Touch the **Siren** icon and it will immediately blare for the number of seconds you chose in the siren settings (ie. 5, 15, 30, 60 or 120 seconds).

