 


ADDING ANOTHER GUARDZILLA CAMERA

Enhancing your security by adding another Guardzilla camera to your home is simple. Follow these step-by-step directions.

- 1 On the upper right hand corner of your Guardzilla app's home screen press the blue plus (+) sign.



 
- 2 A carousel of product images will appear. Swipe your finger on the product images until the 180° Outdoor Video image and description appears, then select **Next**.



- 3 Plug in your Guardzilla 180 Outdoor camera or load the AA batteries, then select **Next**.




- 4 Wait for the LED light on the front of the camera to begin blinking, then press **Next**.

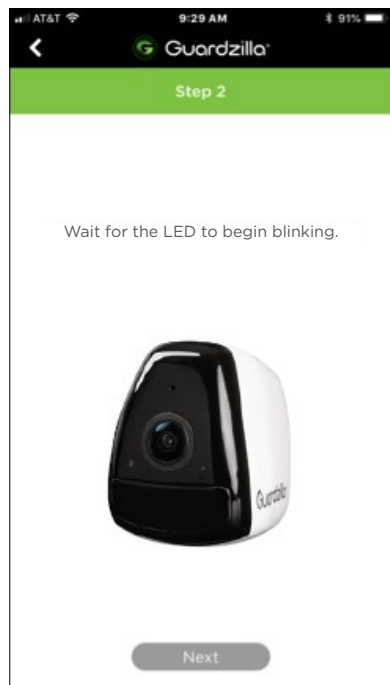

- 5 The screen will prompt you to locate your 2.4 GHz wireless network name and password. When you have located them press **Next**.



 
- 6 Your Guardzilla app will scan your wifi network and list your network name. Confirm that the listed network is a 2.4 GHz network and is the correct network, then press **Next**.

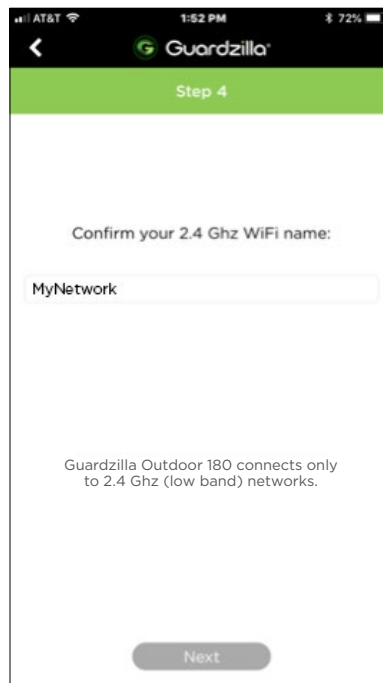


- 7 Enter your home WiFi network password, then press **Next**. NOTE: Your password is case sensitive. Also ensure that there are no spaces before or after your password.



 
- 8 Confirm that the correct **SSID Network** is showing and that you have entered the correct **Password**, then press **Confirm**.

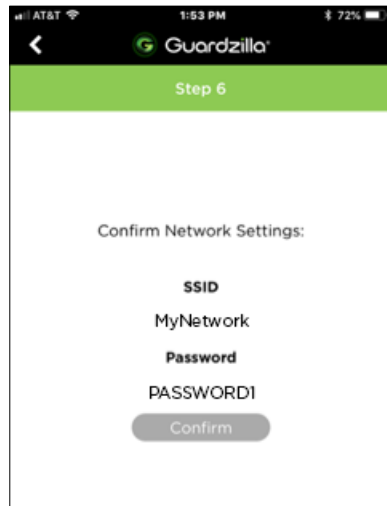

 - 9 Your Guardzilla will inform you that your connection information has been sent, and the camera is now going through the connection process to your WiFi network.

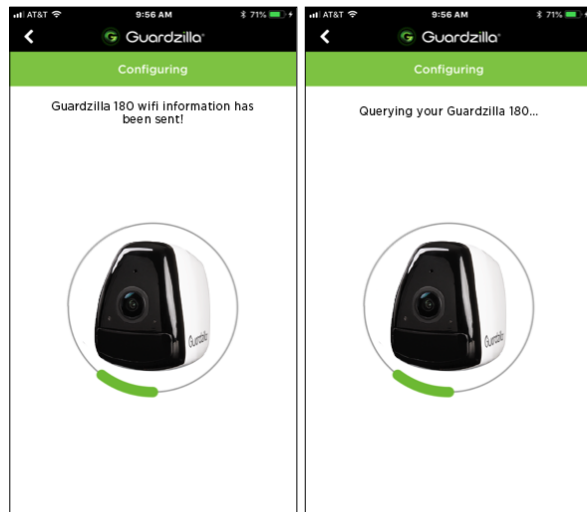

- 10 You will now be asked to name your camera. Enter a camera name (e.g. den) and press **Next**.

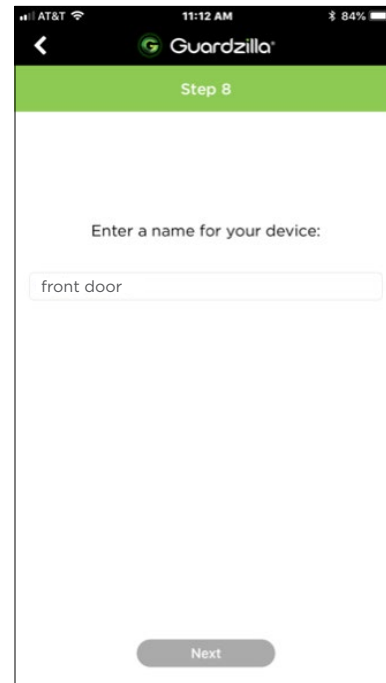

- 11 After your connection has been made choose a video cloud storage option for accessing all motion detection video clips. Three options are offered:

1. **FREE Plan**
2. **PREMIUM Plan**
3. **ENHANCED Plan**



-
- 12** The **Congratulations** screen will appear. You can now go to the home screen and begin using your Guardzilla camera.

